

## Materials Needed:



12MM ROUND COTTON BEAD MONTANA BLUE PEARL
PRODUCT#: BH2065-12-MO



DIAMONDUO™ MINI 2-HOLE BEAD 4X6MM
PRISMATIC PEACOCK - 25
GRAM BAG (APX 325 PCS)
PRODUCT#: DD/P28102BL/46



**ZOLIDUO BEAD 5X8MM** RIGHT SIDE CRYSTAL ETCHING VITRAIL

Apx. 84 pcs.



BEADALON WILDFIRE .006 INCH BLACK 50YD PRODUCT#: 161T-008

Apx. 84"

Apx. 9 pcs.

Apx. 42 pcs.

2MM STEEL CABLE CHAIN BLACK FINISH -20MTR(65FT) SPOOL PRODUCT#: CC/250/BN



BEADALON 18G JUMP RING ID 1/8 INCH BLACK 180PCS PRODUCT#: A314-18-02-04



11/0 JET OPAQUE STRUNG CZECH SEED BEADS PRODUCT#: SB/J0/11/0

1 INCH 24G(0.50MM) EYE PIN STERLING SILVER .925 100PCS PRODUCT#: SSPN3002/24G/100

10

5MM BEADED RONDELL BALI STYLE STERLING SILVER 50PCS PRODUCT#: sscD3562/5




Apx. 252 pcs.

Apx. 18 pcs.

Apx. 20 pcs.

#### STEP 1


1) Using a 24" length of thread, add 6 DM, positioned flat on their backs, threading the lower hole on all beads. Turn thread's direction and rethread same holes of same beads, going in the same direction. Pull to tighten, beads should form a tight ring.

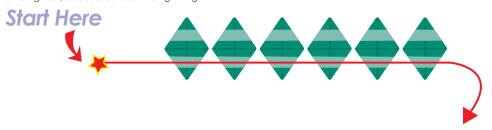



### STEP 2

2) Rethread original DM, pull to tighten. Diagonally cross the back of this same DM, then threading the outer hole of this same DM, moving clockwise around ring.

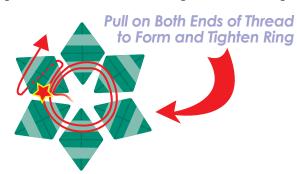


## STEP 3

3) Add SB, ZR, SB.
Thread adjacent
existing DM using
outer hole. Pull
to tighten ring.
Repeat this step
5 times, adding beads
around circumference
of beaded ring.




## STEP 4

5) Rethread original SB and ZR, pulling thread to tighten beads.

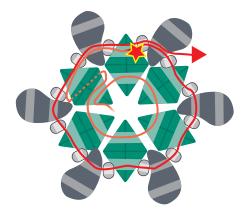


## STEP 5

5) Add SB, ZR, SB. Allow these beads to rest on top of the DM below. Moving clockwise, rethread existing adjacent SB and ZR. Pull to tighten beads. Repeat this step 5 times adding second level of beads around circumference of beaded ring.

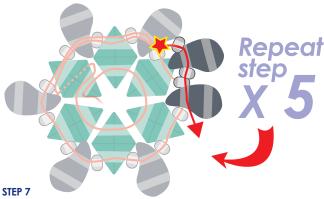


## STEP 6

6) Rethread original ZR through lower hole. Diagonally cross the back of this same ZR, threading the outer hole of this same bead, moving in a clockwise rotation. Add SB, thread adjacent existing ZR using outer hole.

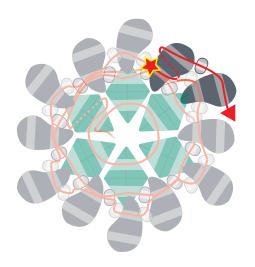

7) Add SB before proceeding into outer hole of adjacent ZR.
Add SB between each ZR, moving clockwise around beaded ring.
Once completed, tie half hitch knot with remaining thread. Pull knot inside adjacent ZR. Cut excess thread. Also knot and cut excess thread from tail, hide tail knot inside DM.

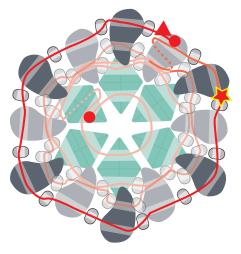

Repeat steps 1-7


X

Medallions

# **Druk / Eyepin Connectors**

## STEP 8

8) Pull 1 eyepin through SR, DK, SR. Close eyepin at both ends with round pliers.

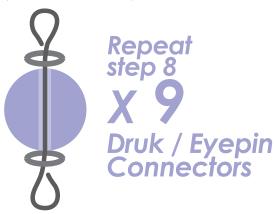

## STEP 9

9) Close JR around eyepin of connector. Wrap 2" of chain around medallion (between ZR), then close at eyepin with JR. Medallions should be suspended from Drunk / eyepin connector, using chain and JR.



### STEP 10

10) TASSEL: Create 8 x 3" lengths of chain, attaching all lengths to Druk/eyepin connector at one end using JR.

